


# QOOZI


**INSTALLATION GUIDE**

**LIVO KK 035**


**DOMA KK 035**

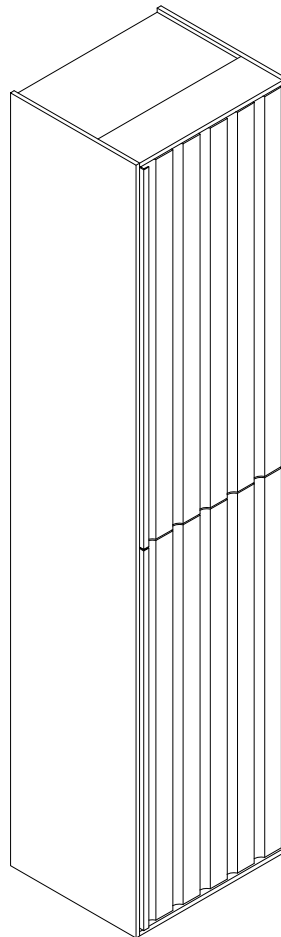


## PRE-INSTALLATION - TOOLS REQUIRED




Drill



Measuring tape



Screwdriver




Silicone




Level




Pencil

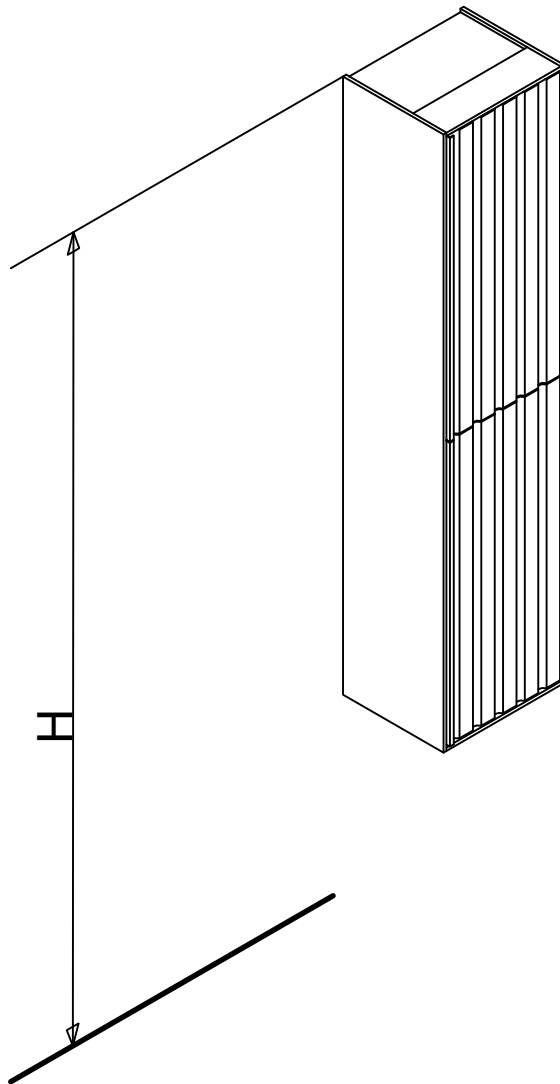








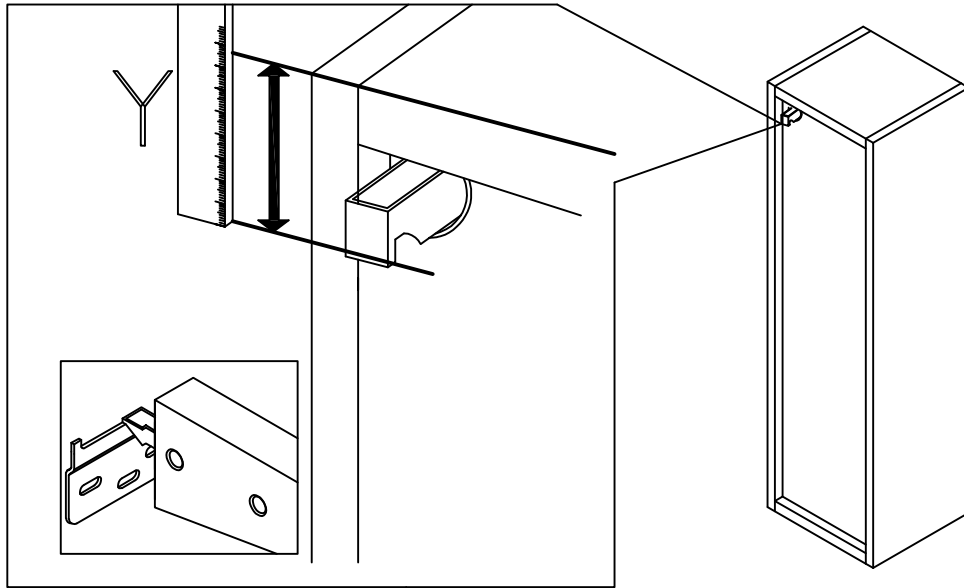


Please measure the "Y" size


2

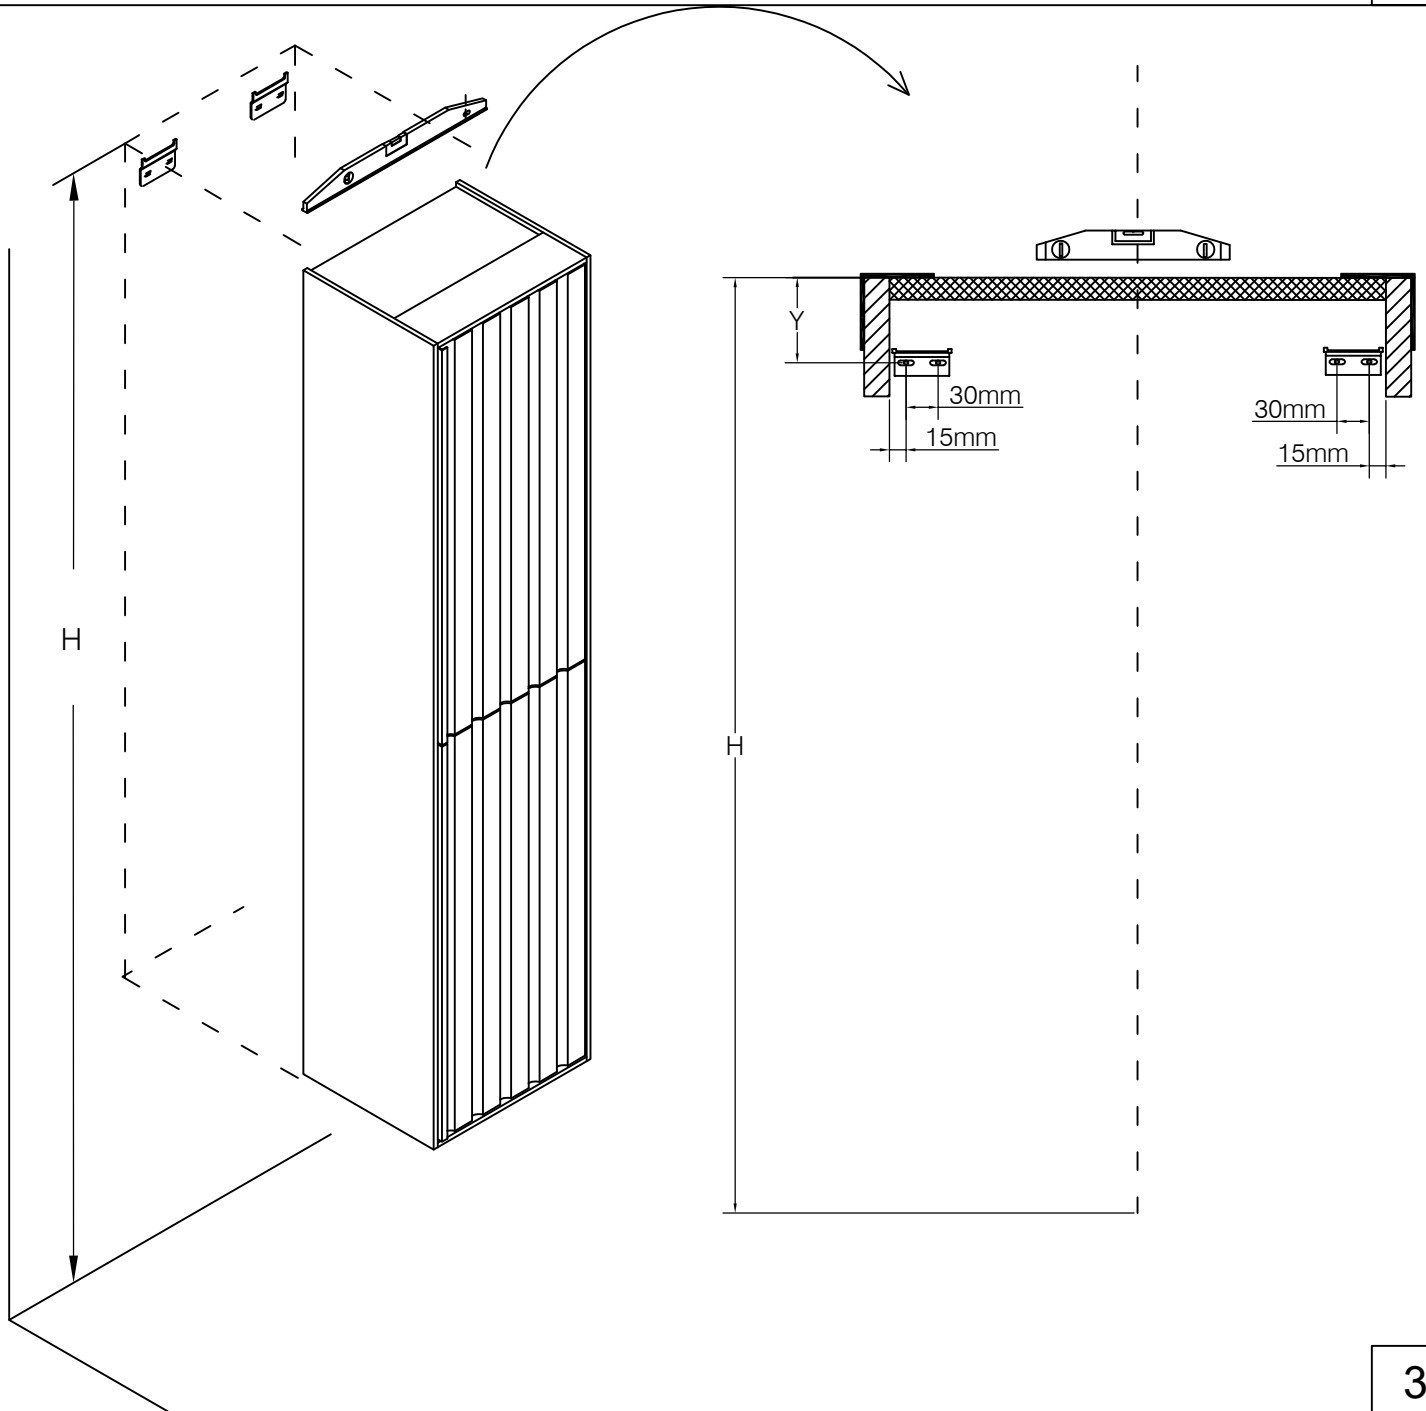


3

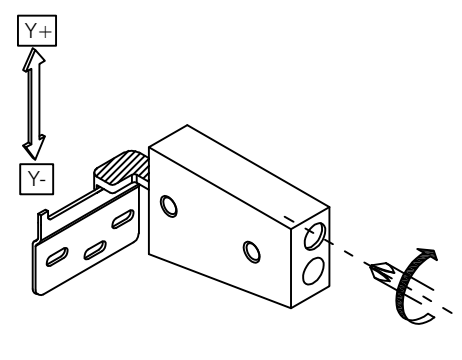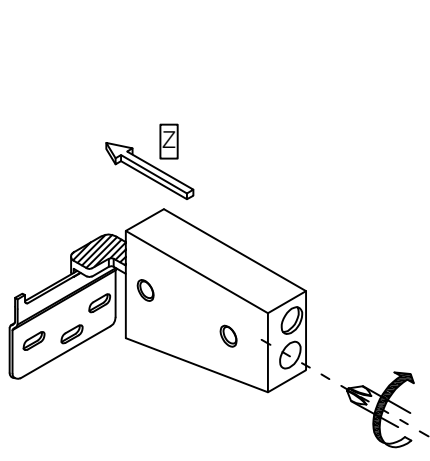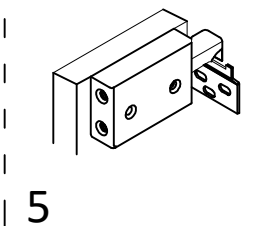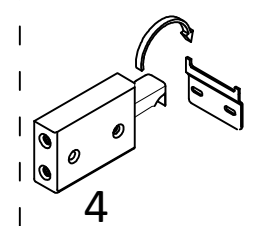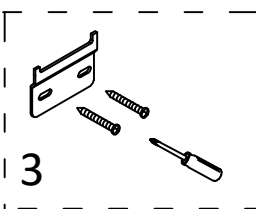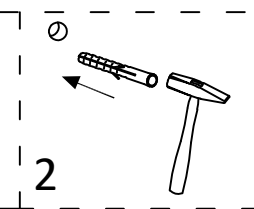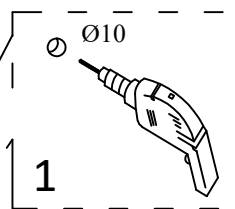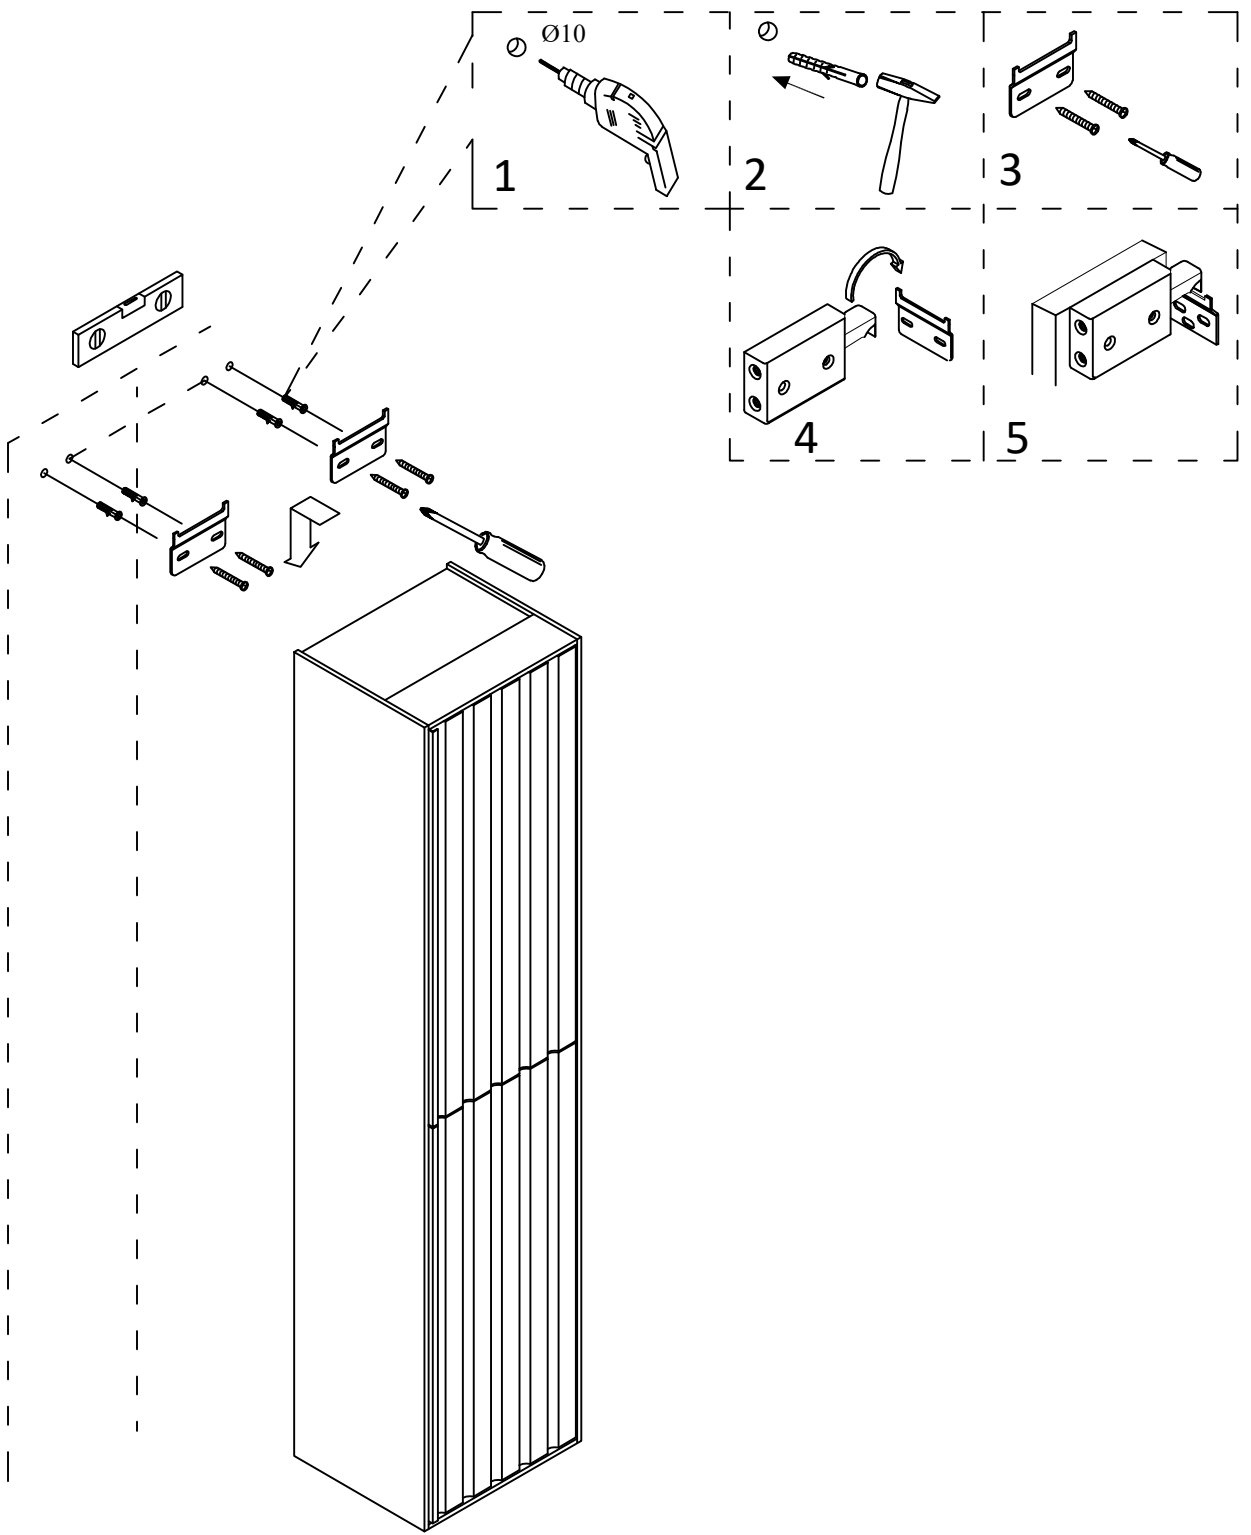


## PRE-INSTALLATION - TOOLS REQUIRED




Drill




Measuring tape



Screwdriver




Silicone




Level




Pencil

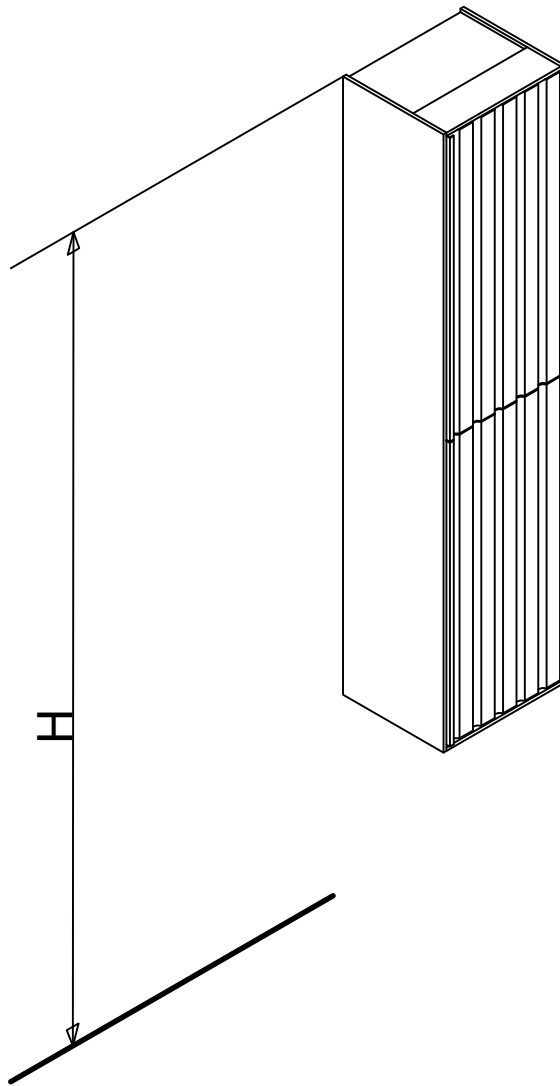

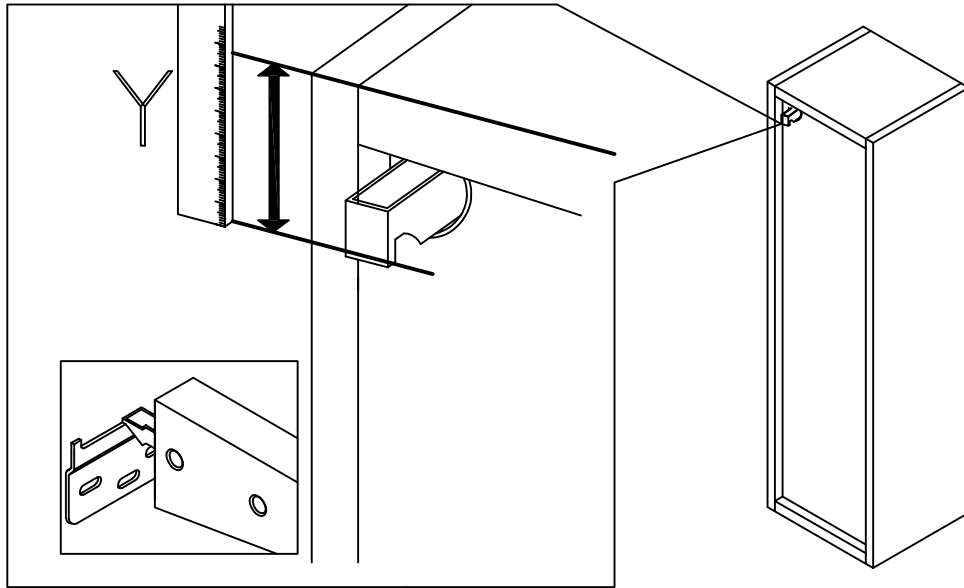

Please measure the "Y" size

2

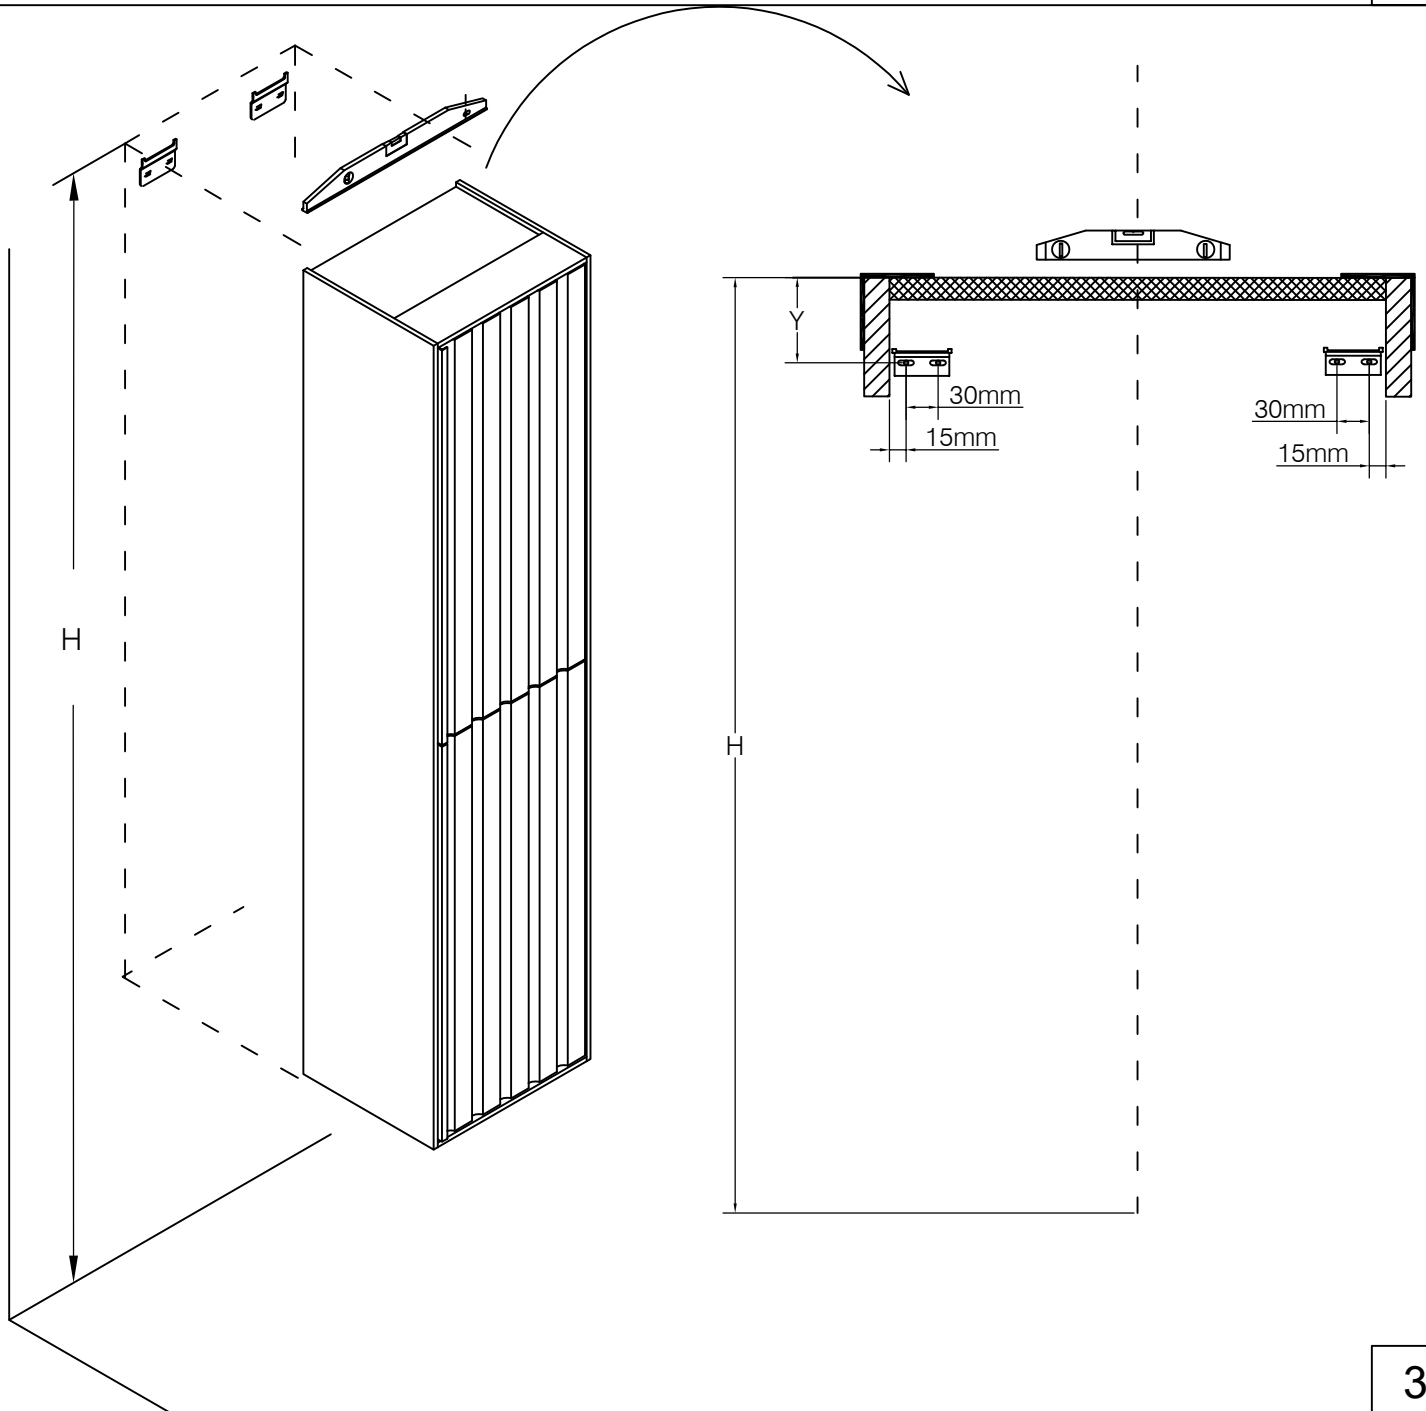

3

