



# QOOZI

## INSTALLATION GUIDE


### DOMA OK 080

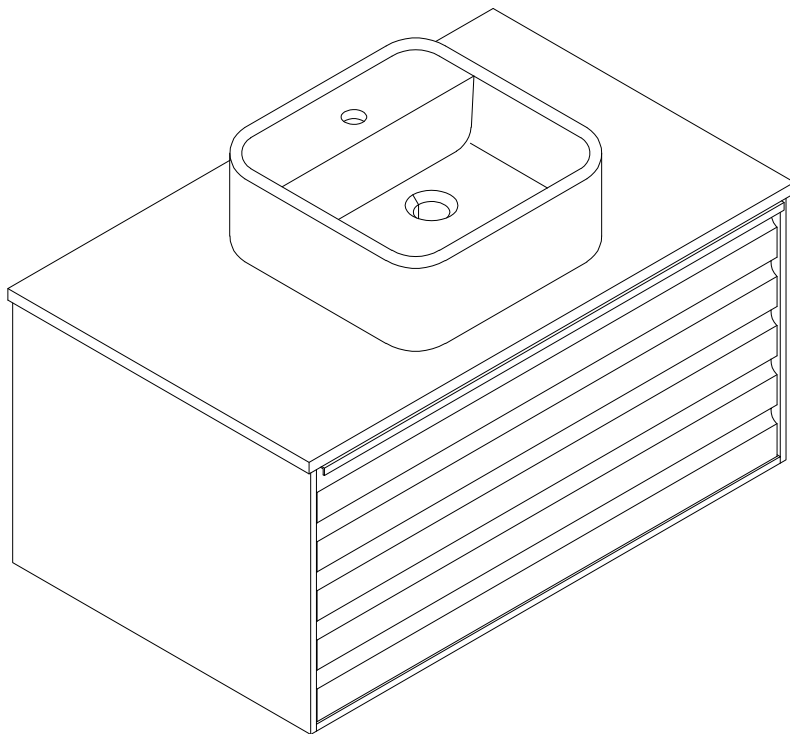


# PRE-INSTALLATION - TOOLS REQUIRED




Drill




Measuring tape



Screwdriver





Silicone





Level





Pencil

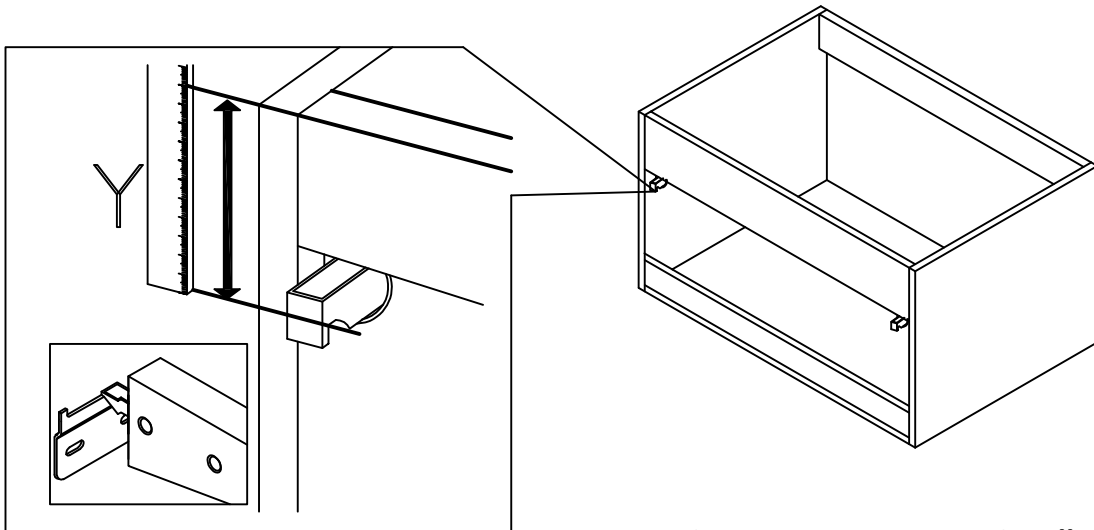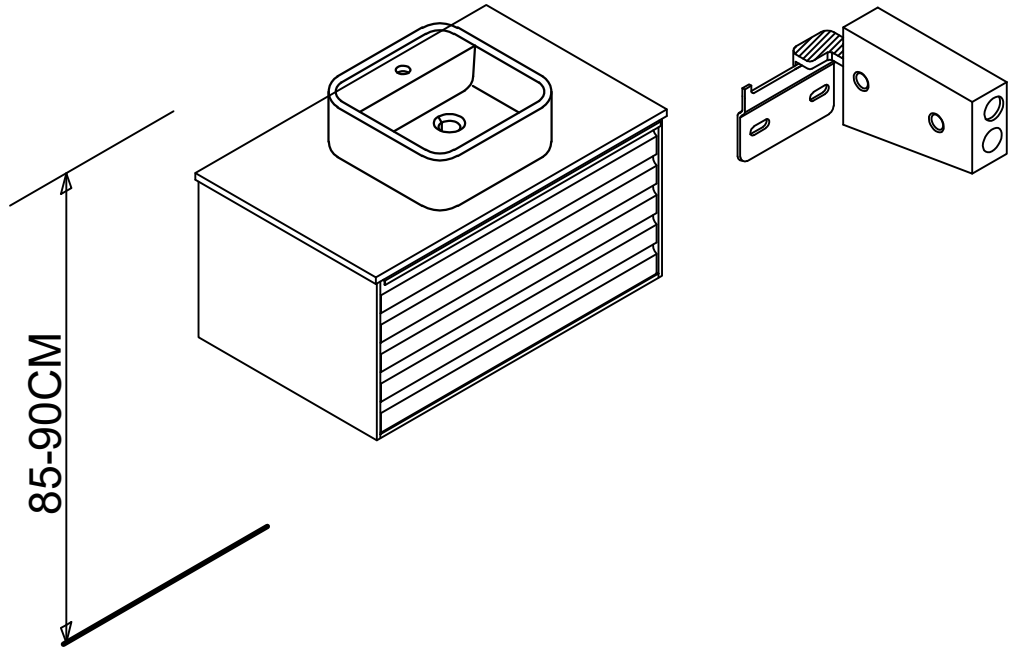



Please measure the "Y" size

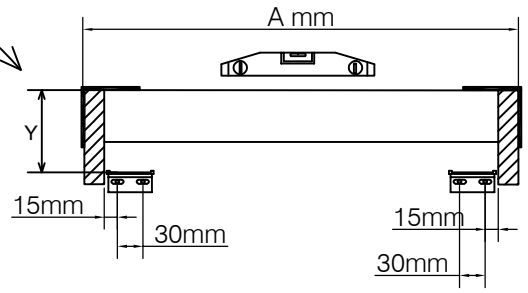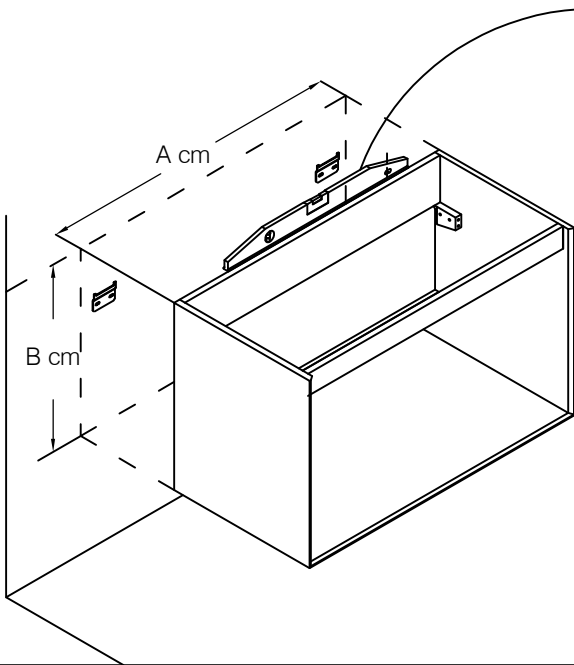

2

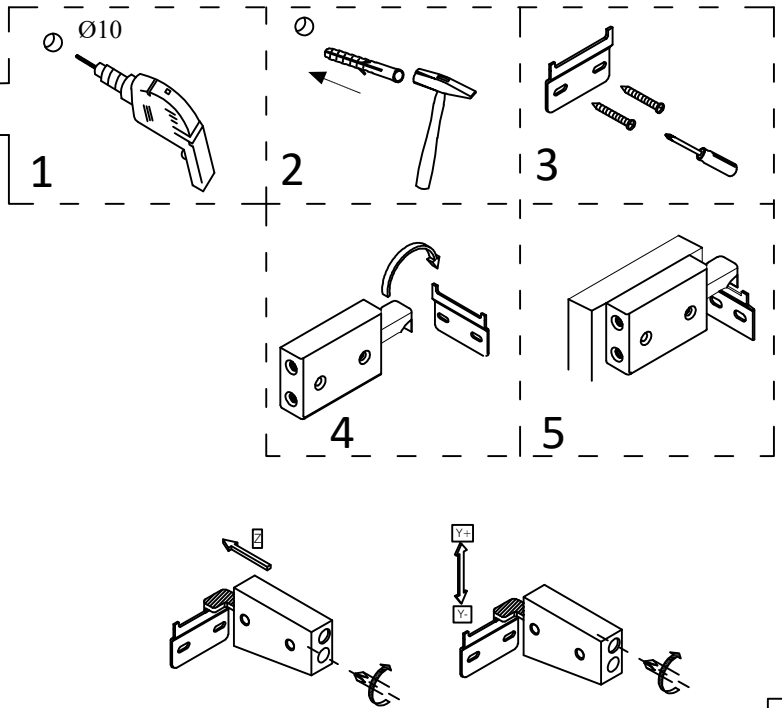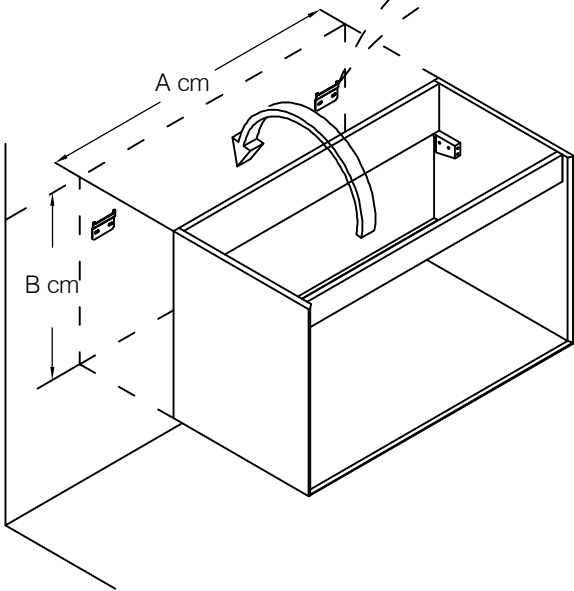

3

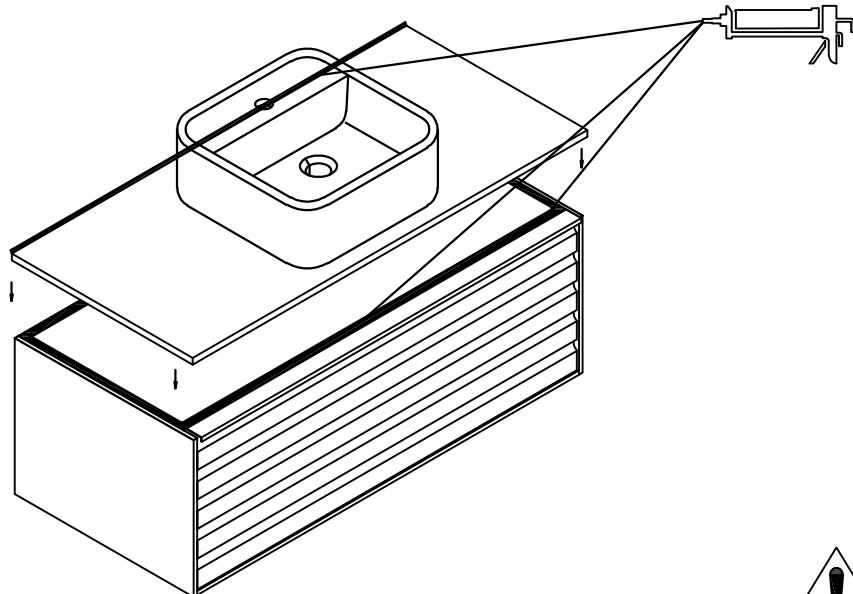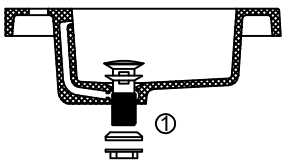

Please dry the cabinet with a soft cloth after use do not allow to remain wet



3