



QOOZI


INSTALLATION GUIDE APOLLO OK 080 W

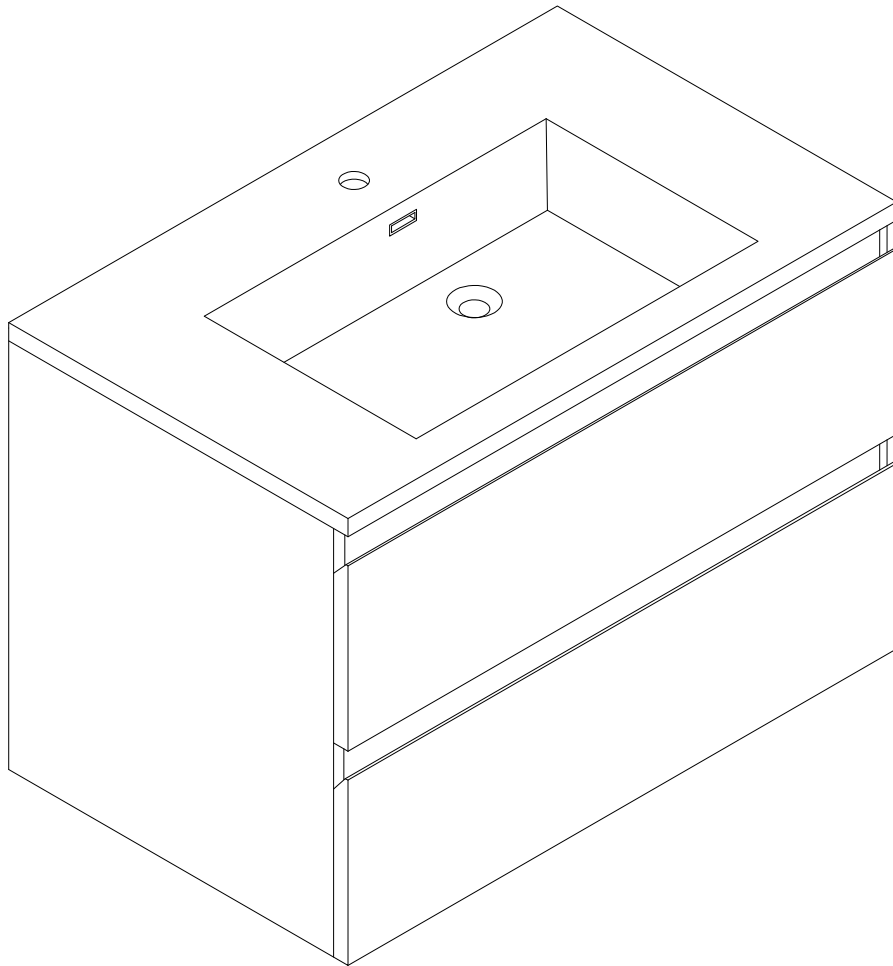


PRE-INSTALLATION - TOOLS REQUIRED




Drill




Measuring tape




Screwdriver





Silicone




Level



Pencil

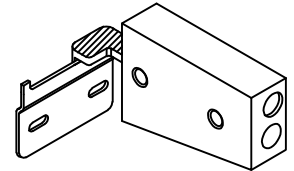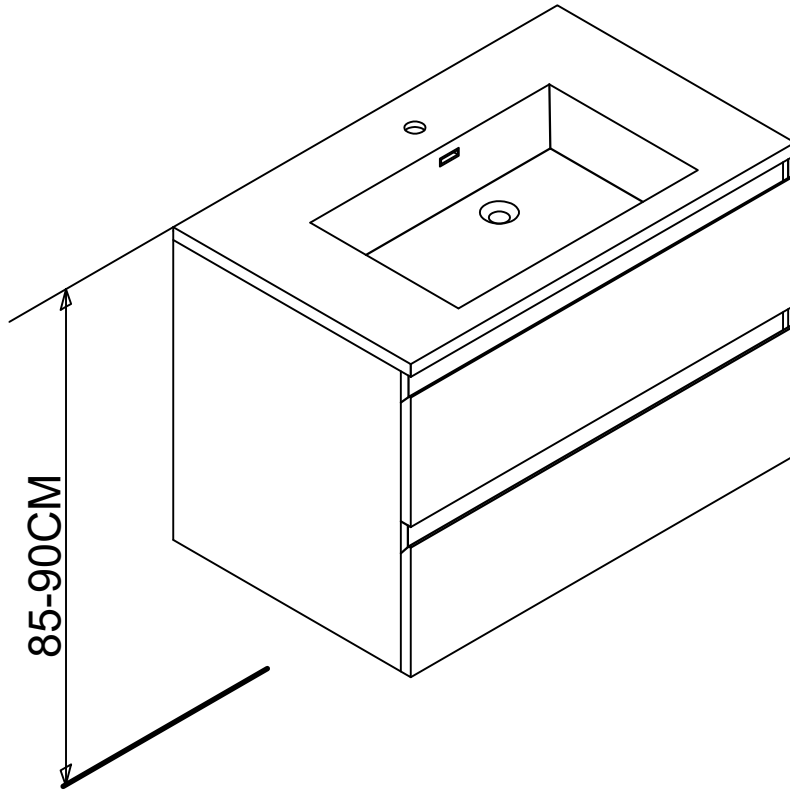


1

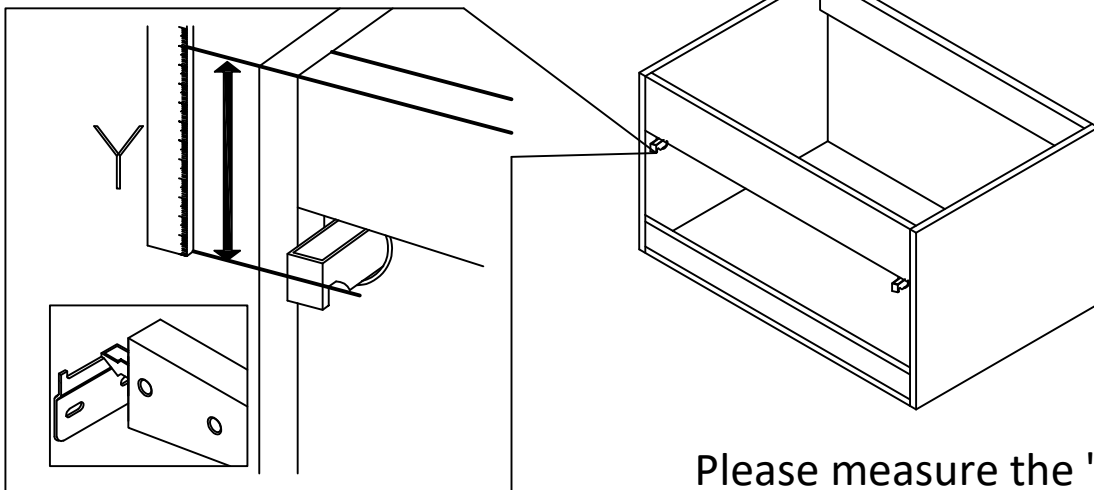


Please measure the "Y" size


2

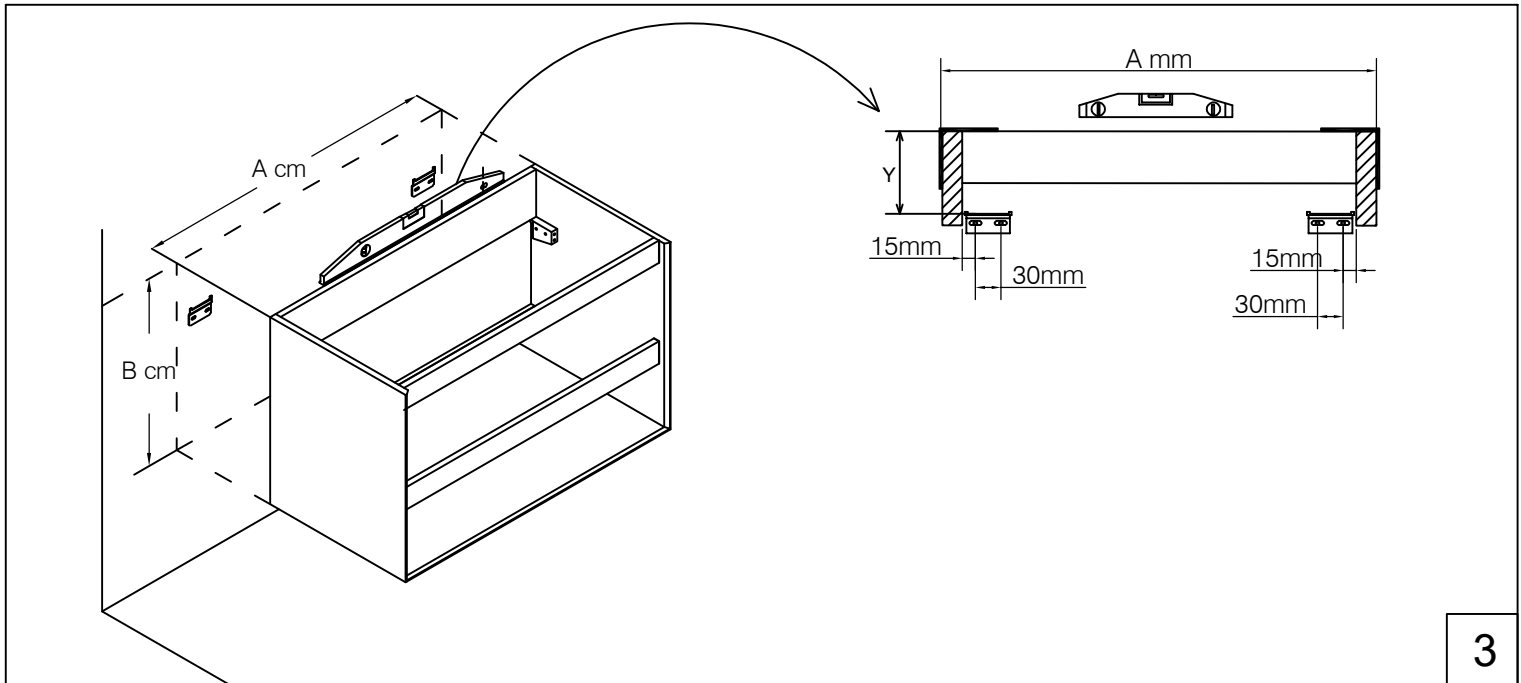

3

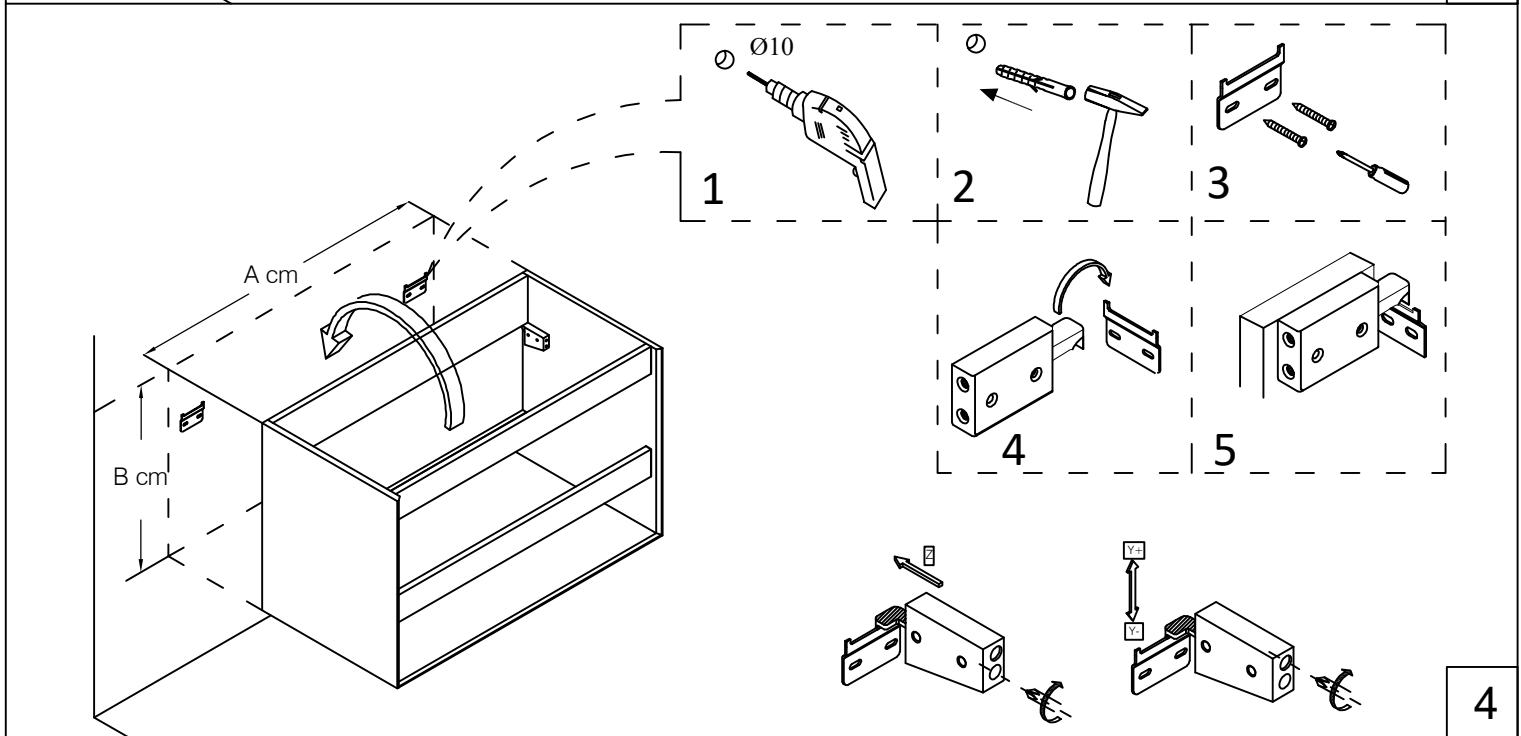

4

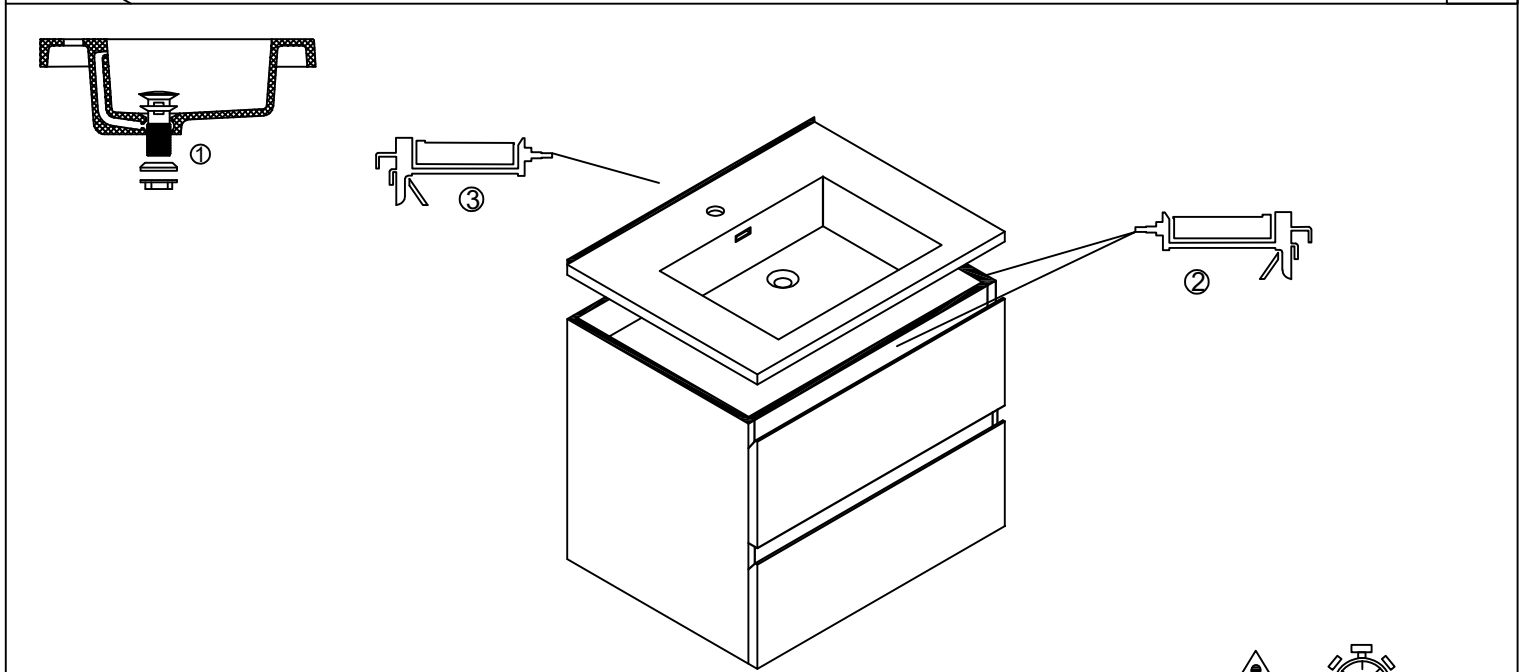

Please dry the cabinet with a soft cloth after use do not allow to remain wet



5