



# QOOZI


## INSTALLATION GUIDE APOLLO SK 080 W

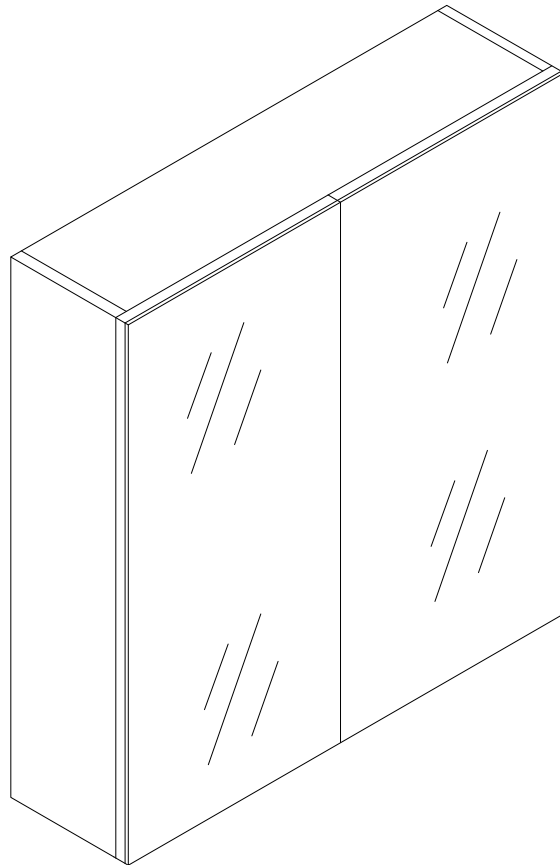


## PRE-INSTALLATION - TOOLS REQUIRED




Drill




Measuring tape



Screwdriver



Silicone






Level




Pencil


## MIRROR CABINET INSTALLATION

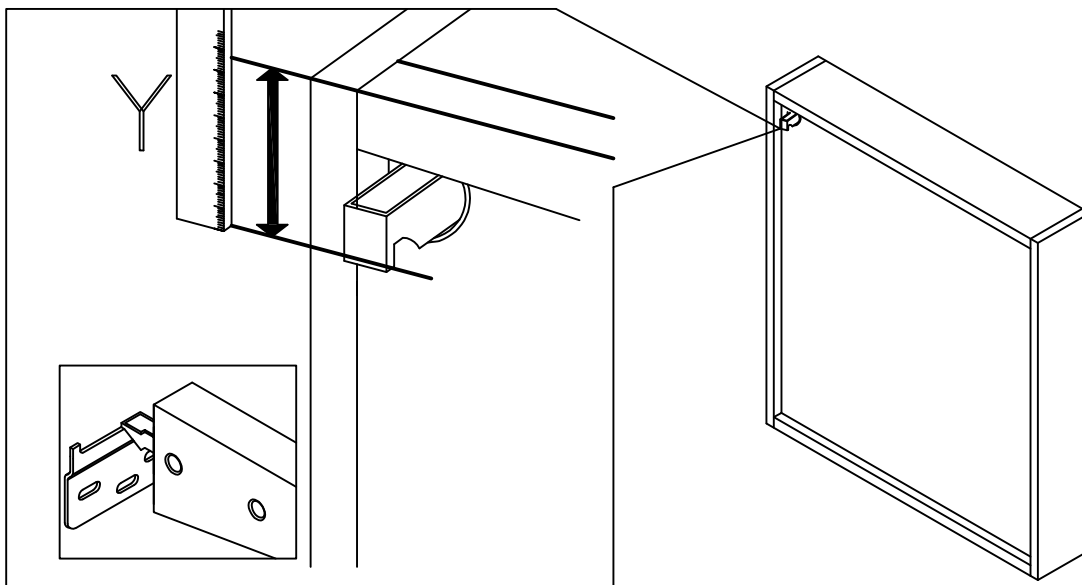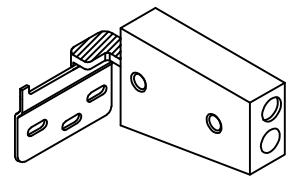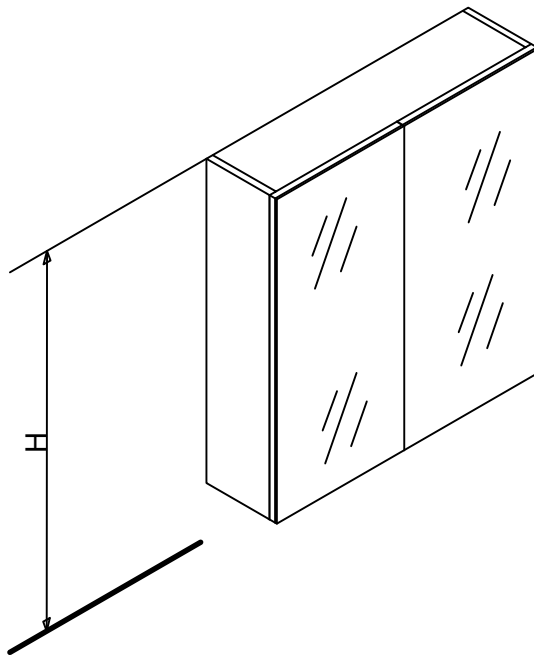

Please measure the "Y" size

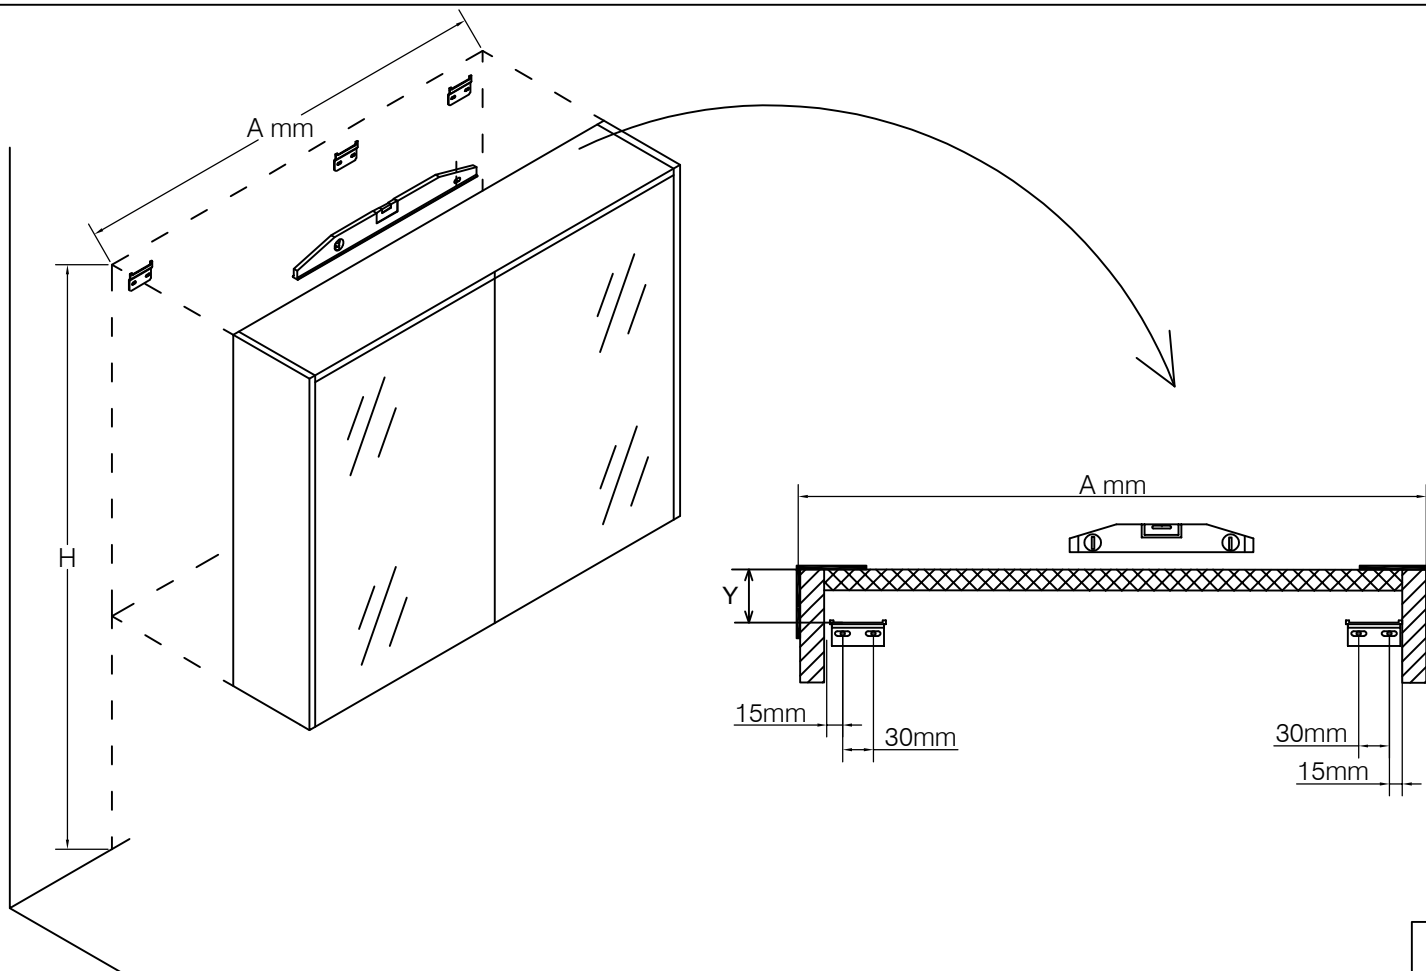

2



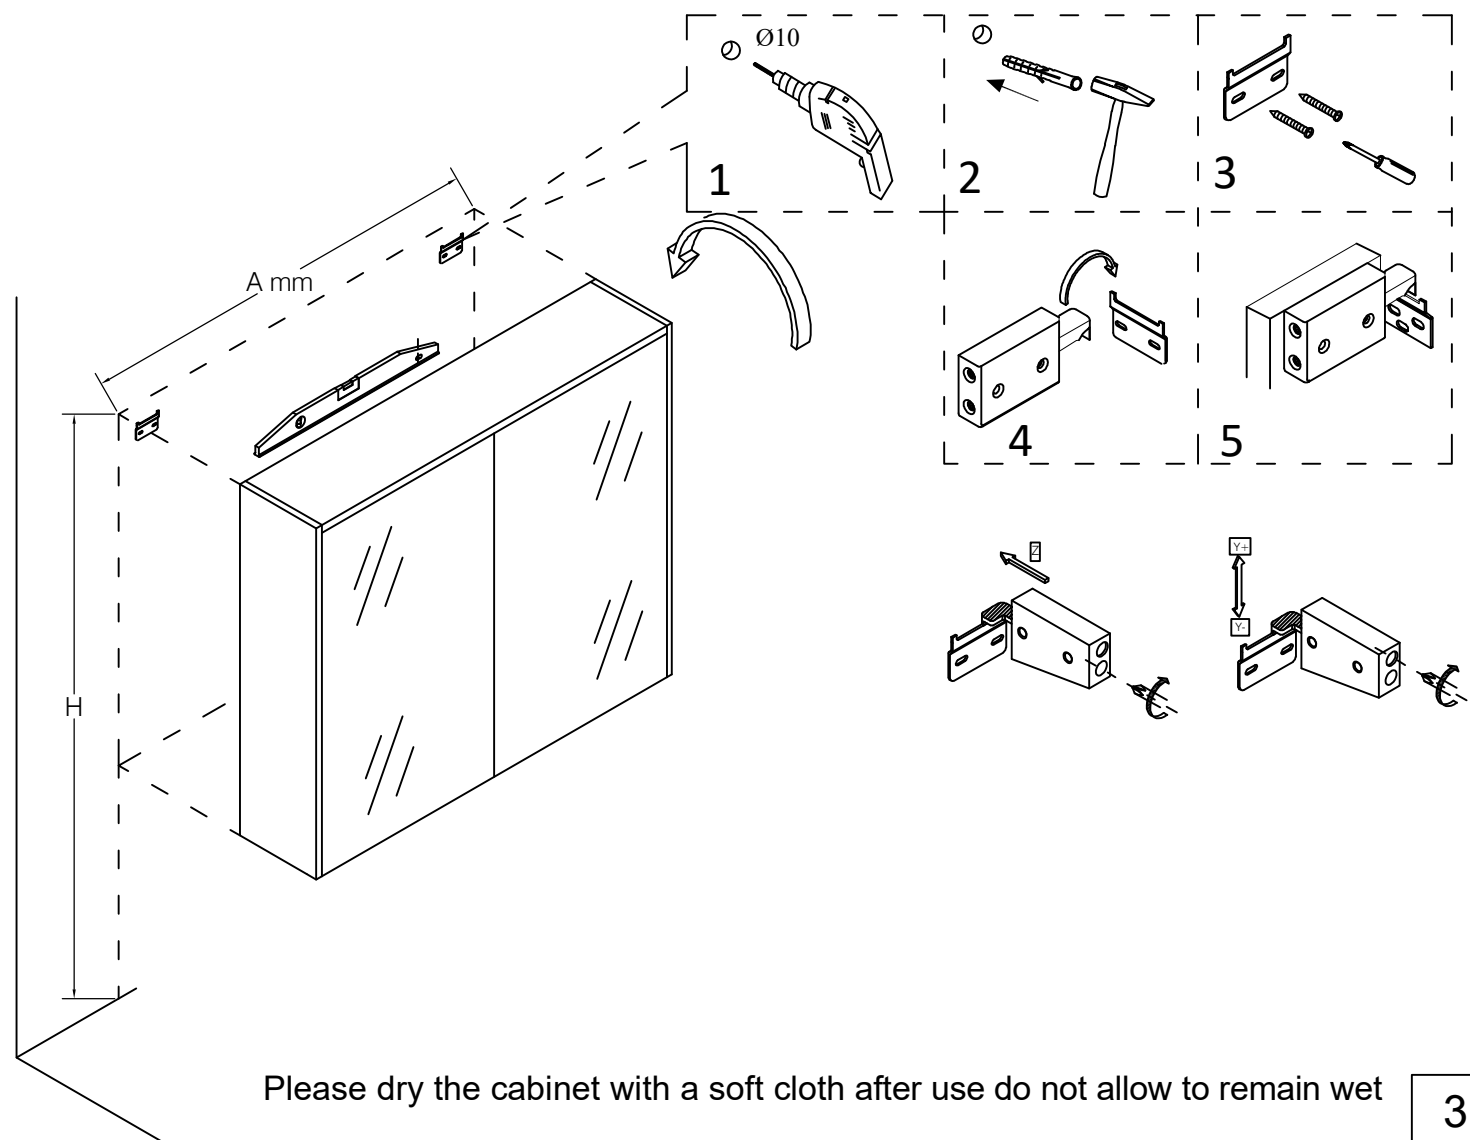


Please dry the cabinet with a soft cloth after use do not allow to remain wet

3

# Disassembling / Assembling HINGE/DOOR

## 1. Disassembling

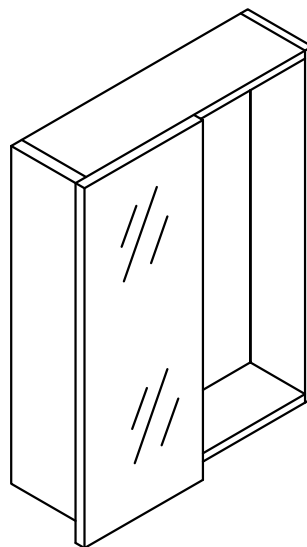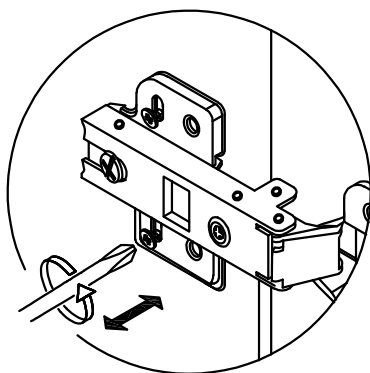

## 2. Assembling

