



# QOOZI


**INSTALLATION GUIDE**  
**FINO OK 080**

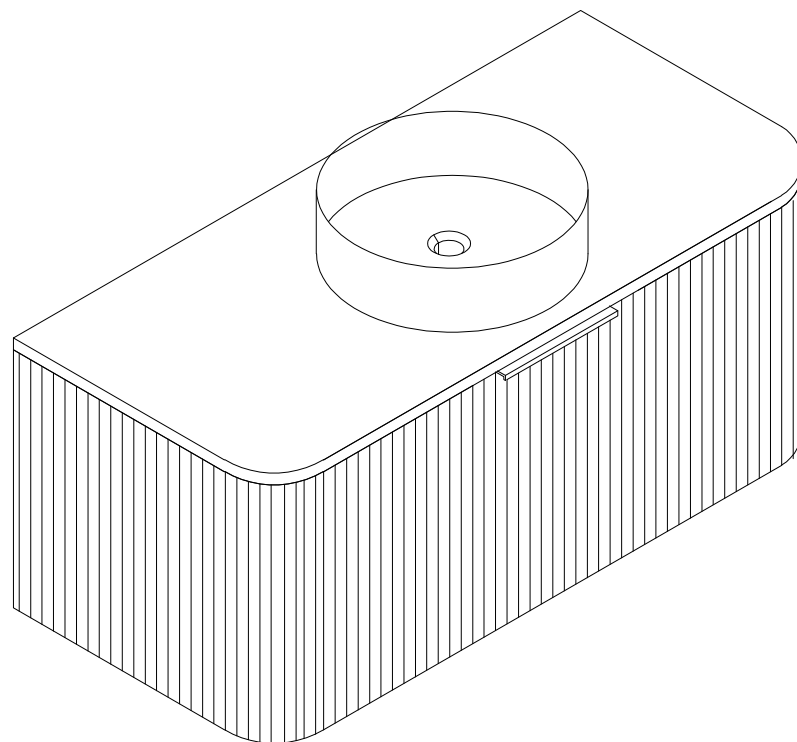


# PRE-INSTALLATION - TOOLS REQUIRED




Drill




Measuring tape



Screwdriver





Silicone




Level




Pencil

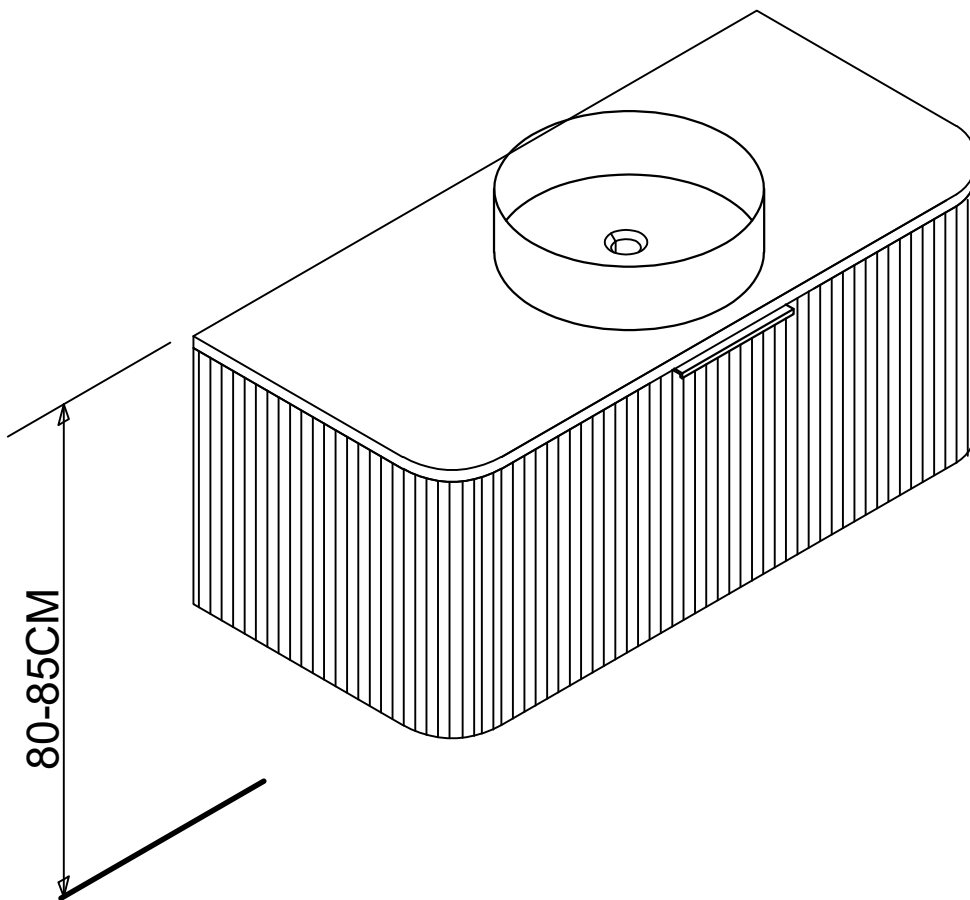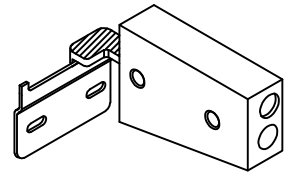



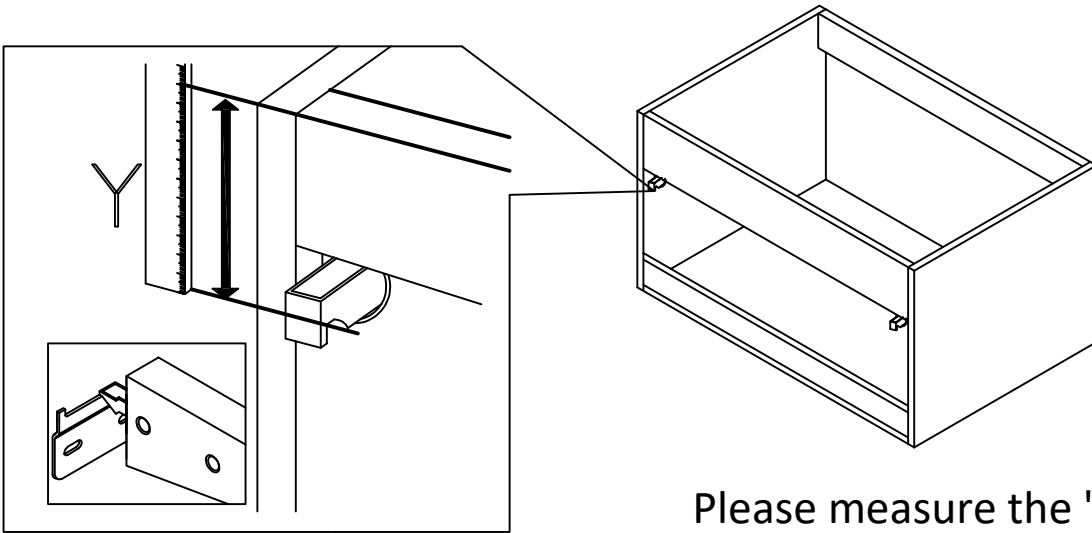


Please measure the "Y" size



2

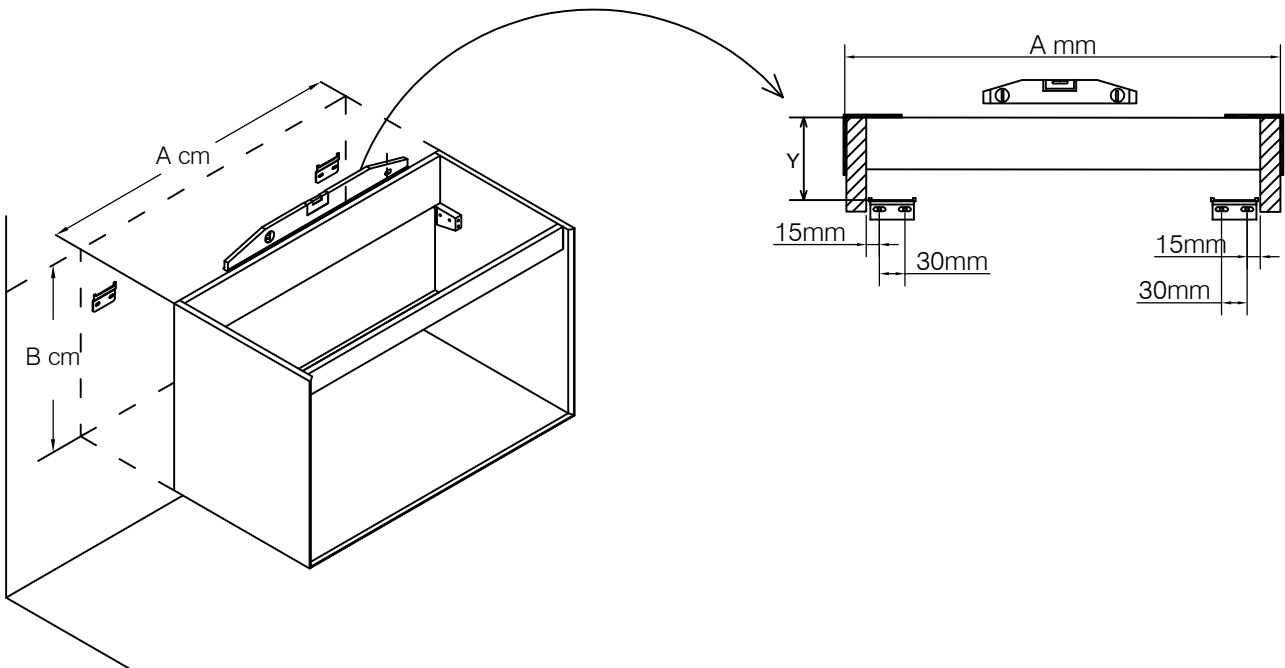

3

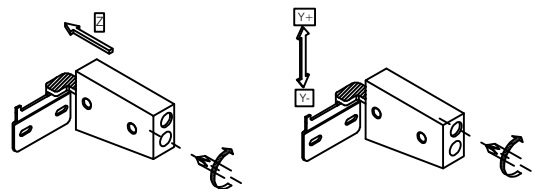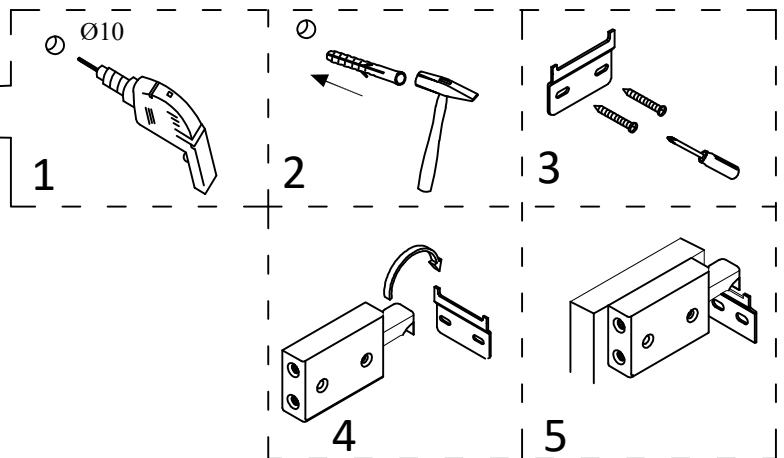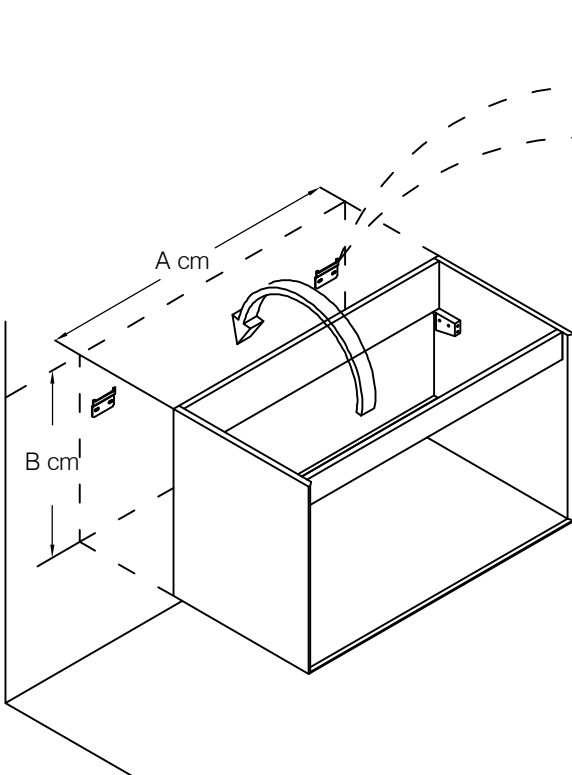

4

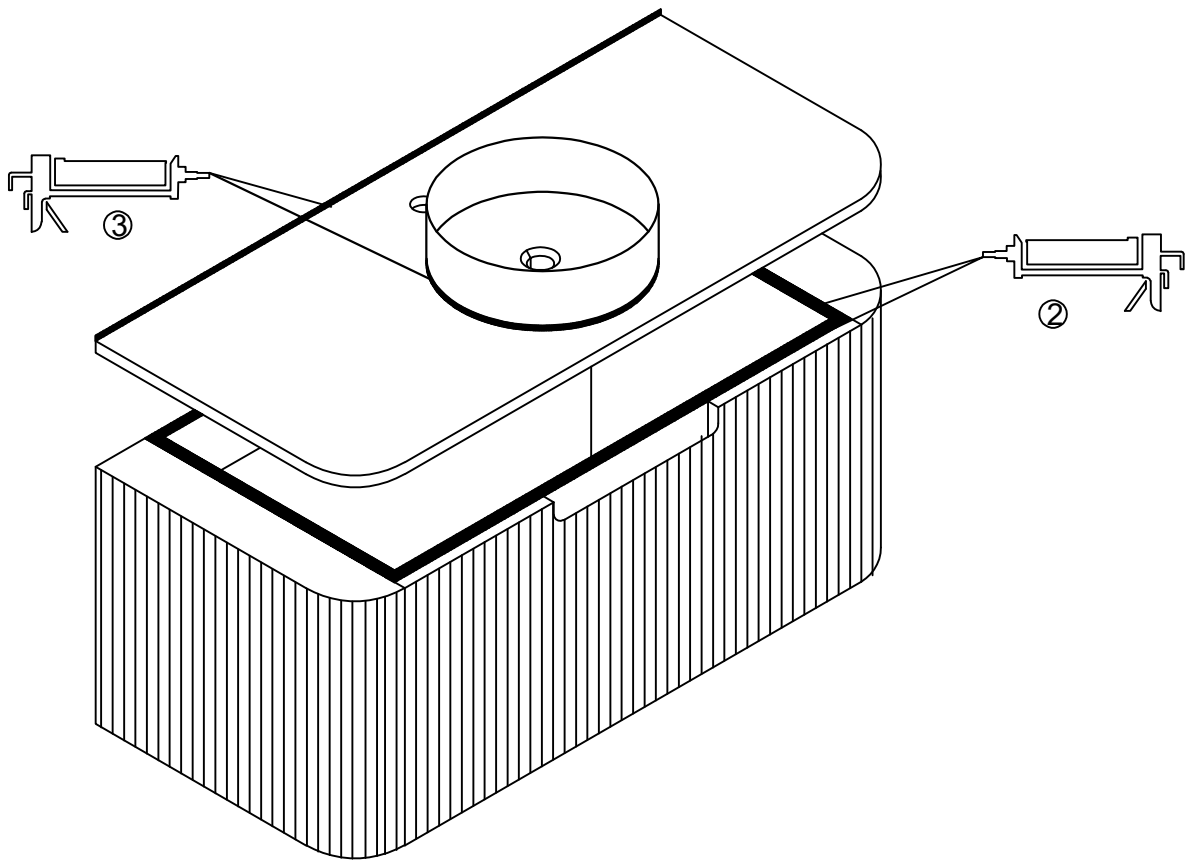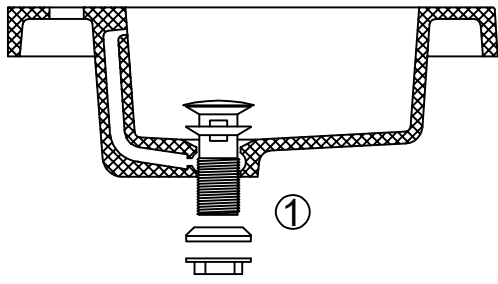

Please dry the cabinet with a soft cloth after use do not allow to remain wet

