


QOOZI


INSTALLATION GUIDE

NESO OK 080


NESO OK 040

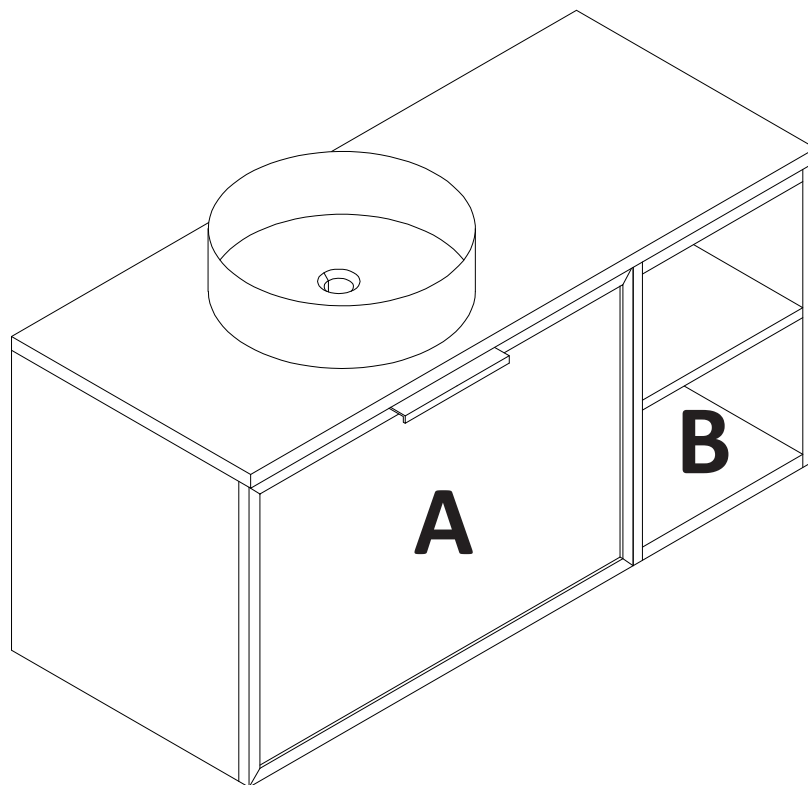


PRE-INSTALLATION - TOOLS REQUIRED




Drill



Measuring tape




Screwdriver




Silicone




Level



Pencil

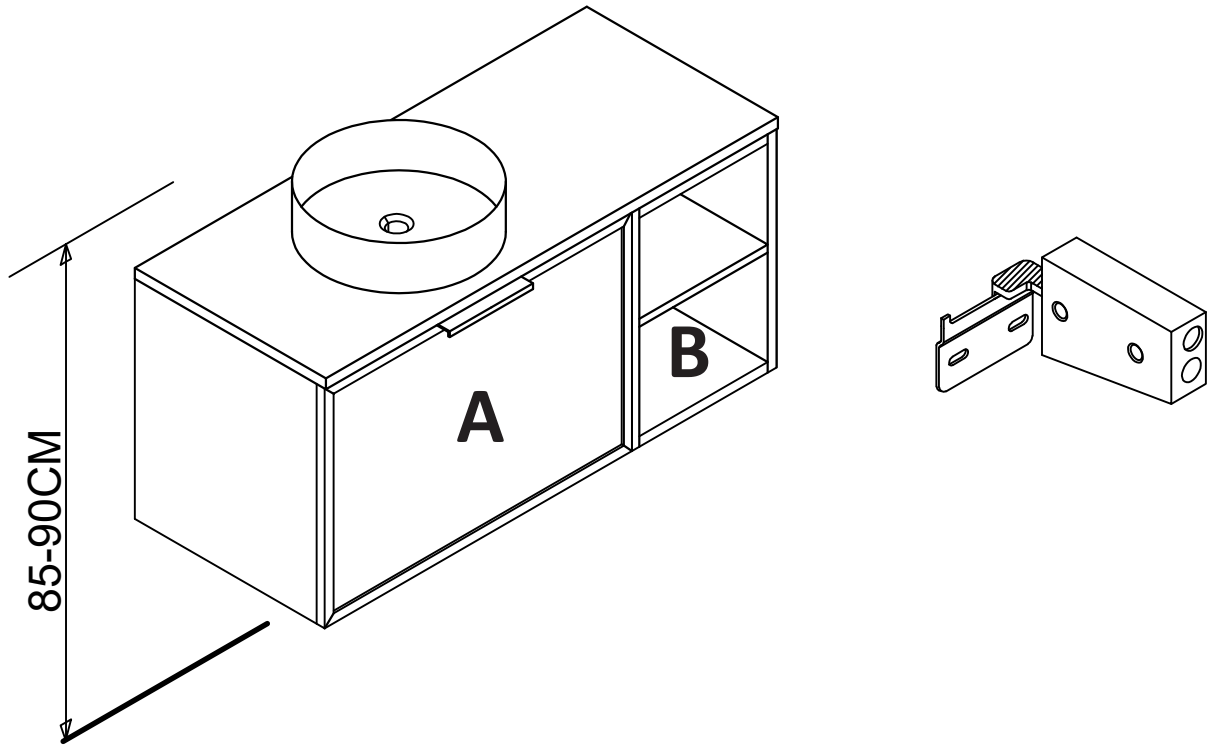


1

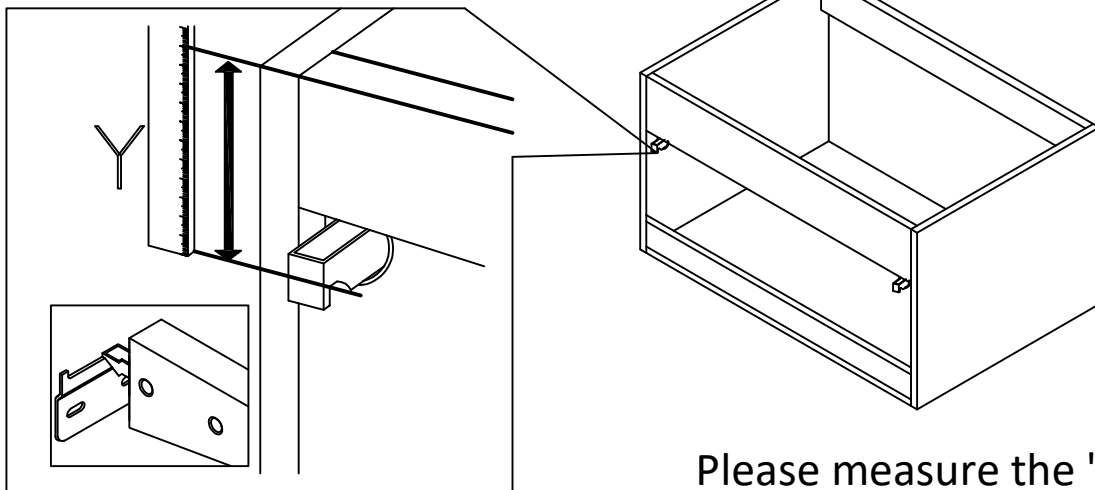


Please measure the "Y" size


2

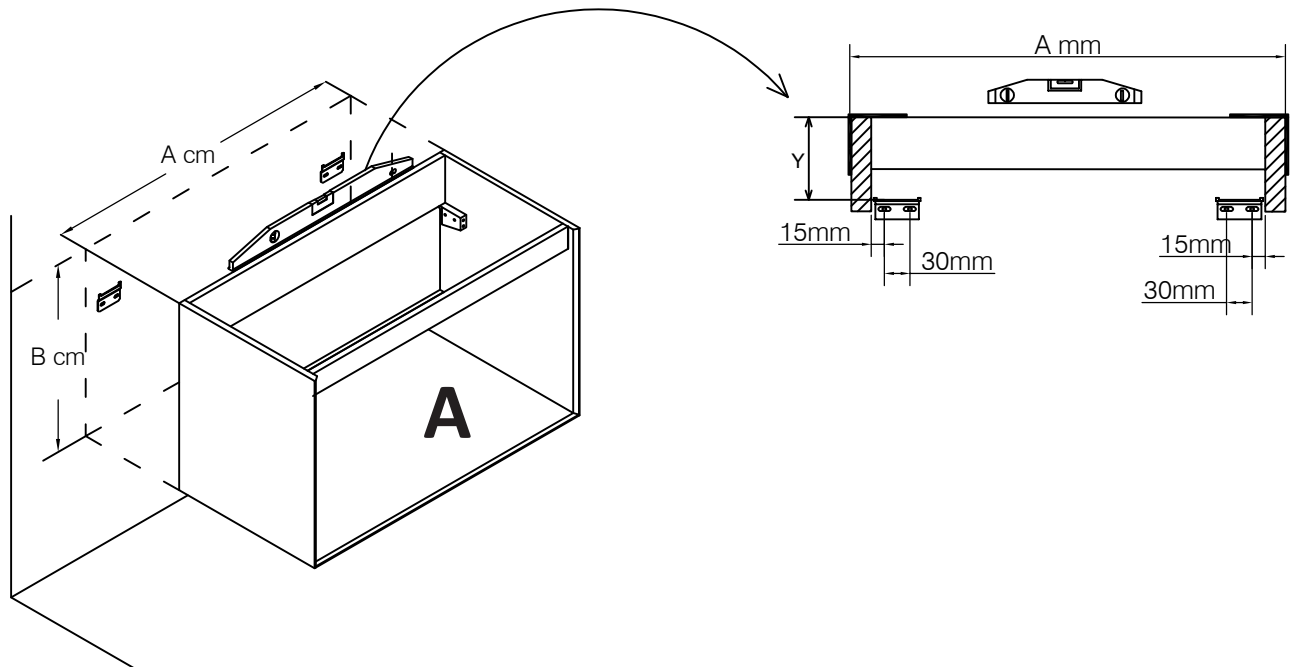

3



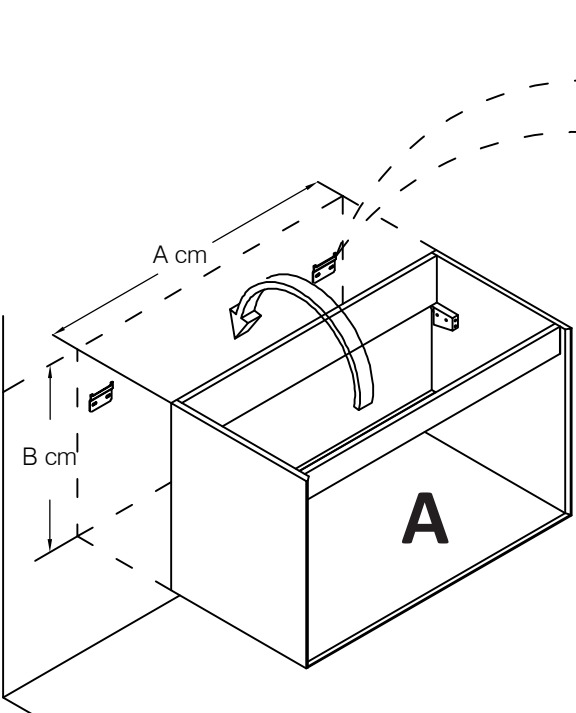


4

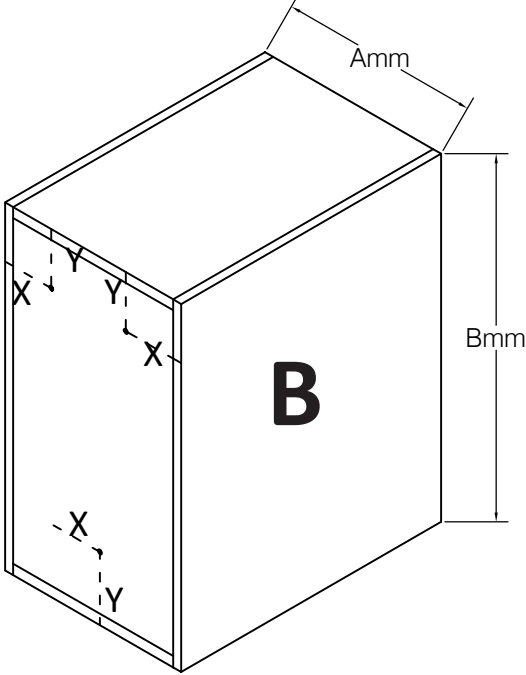

Please measure the "X" "Y" size

5

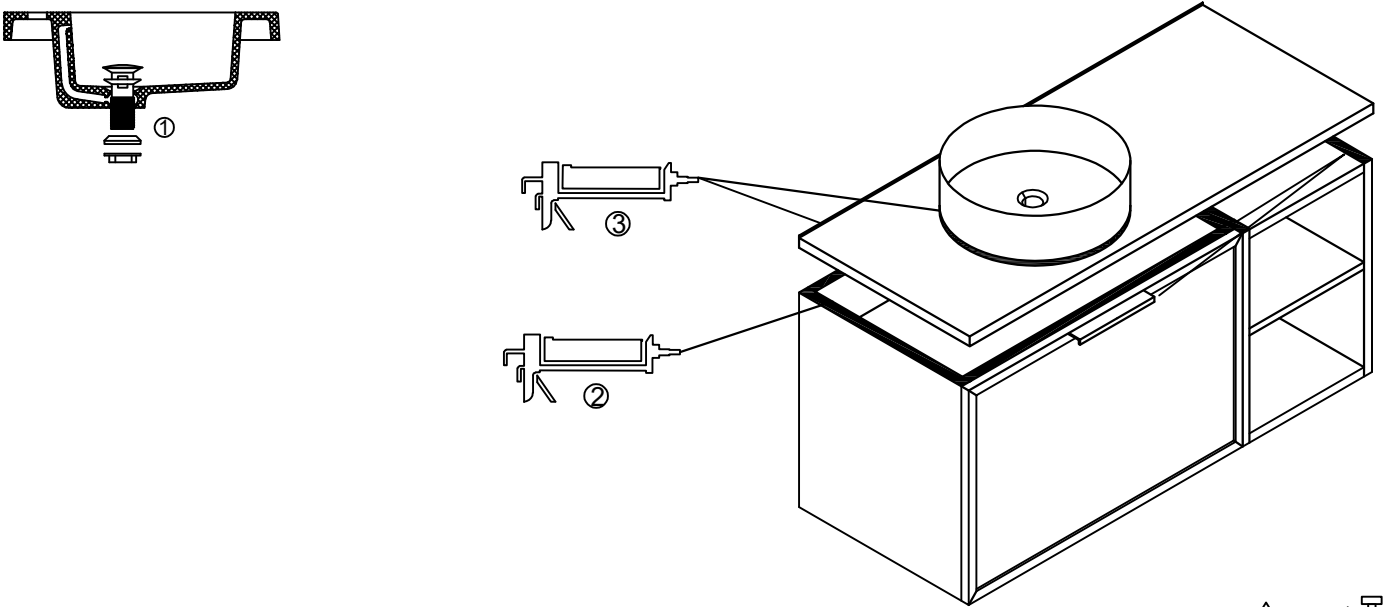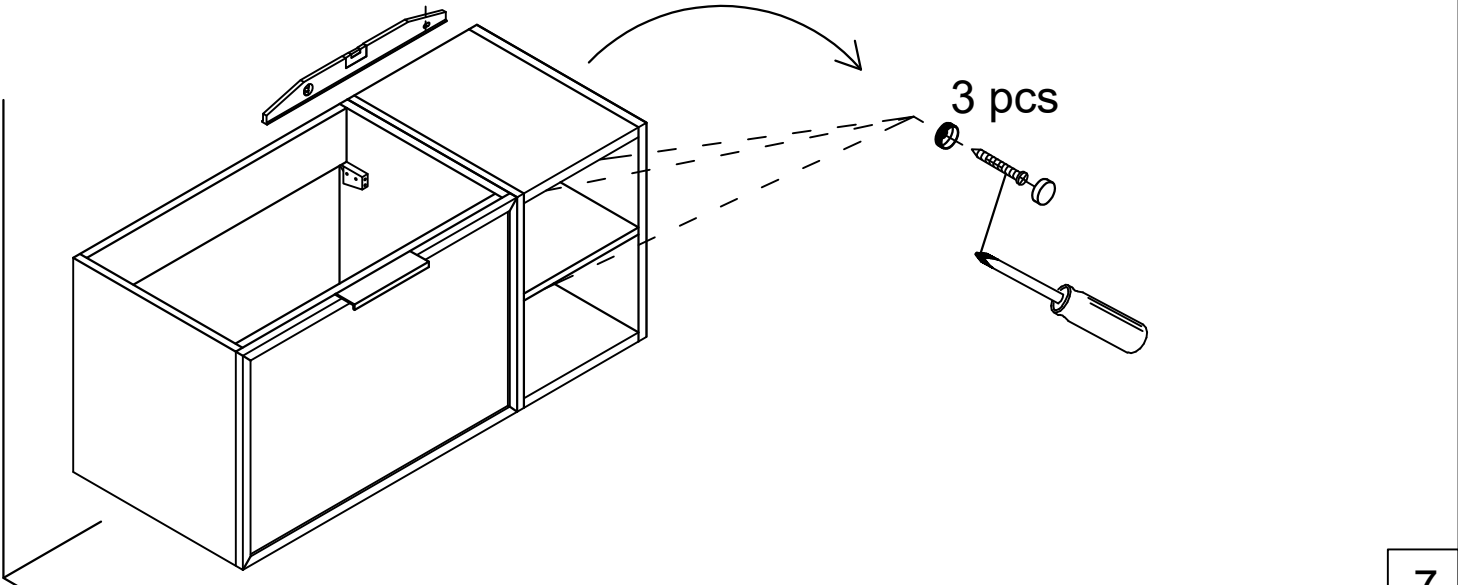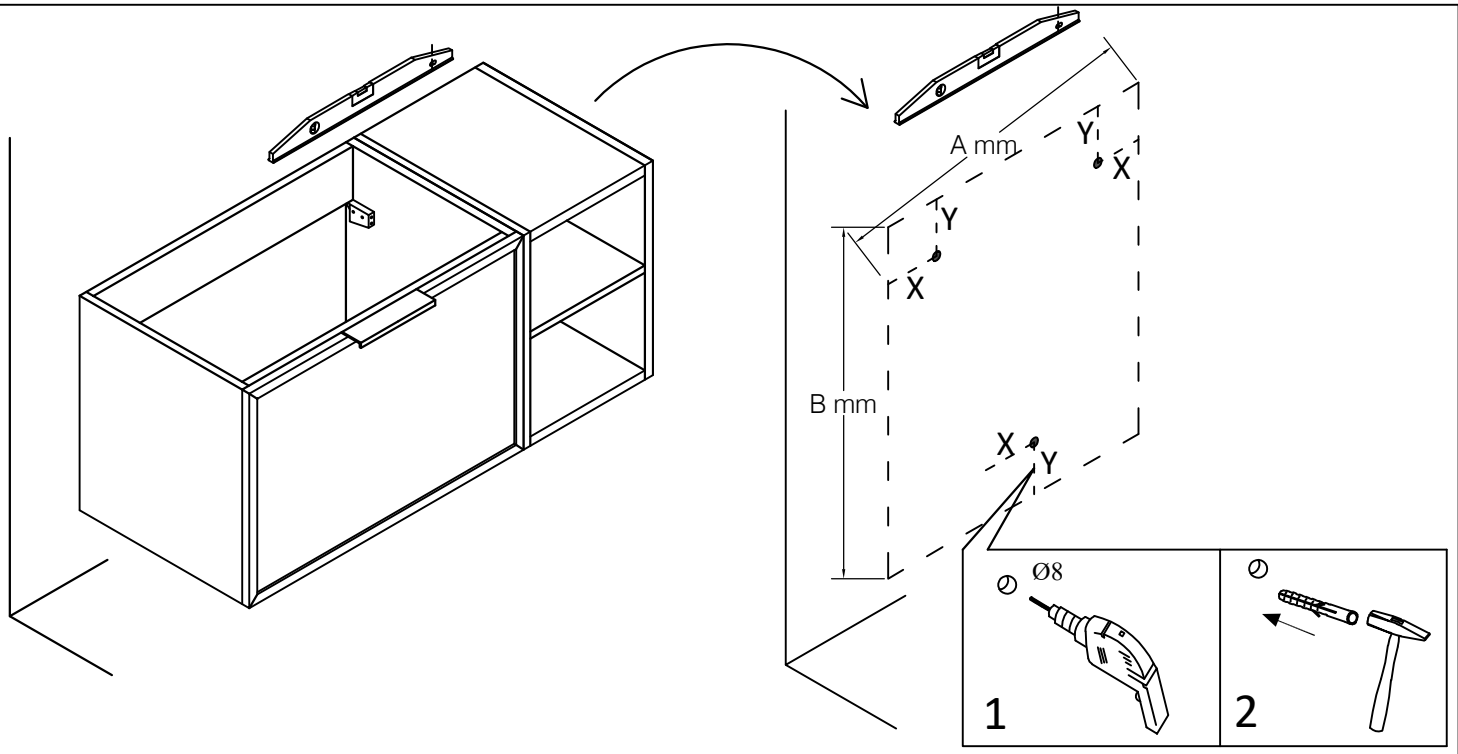

Please dry the cabinet with a soft cloth after use do not allow to remain wet

